

Item Number	Quantity	Part Number	Part Name
1	1	3302	3302-MAIN POWER CONTACTOR 2 POLE
2	1	3304	3304-CIRCUIT BREAKER 2 POLE
3	1	3297	3297-STEP DRIVER ORIENTAL
6	1	3335	3335-MAIN REGULATOR PP2-NO2D5G
10	1	3303	3303-MAIN POWER CONTACTOR 3 POLE / 8 AND 10 STATION
11	1	3305	3305-CIRCUIT BREAKER 3 POLE / 8 AND 10 STATION

