

TAG PRO GXL HEAD AC INVERTER SETTINGS:

PROGRAMMING TAG PRO GXL AC INVERTER GS1-20P2

P1.01 = .1 ACCELERATION

P1.02 = .1 DECELERATION

P3.00 = 2 SOURCE OF OPERATION COMMAND

P4.00 = 2 SOURCE OF FREQUENCY COMMAND

SERVICE FUNCTIONS:

P9.07 is 0 = SET AND READ 1 = LOCKED READ ONLY

P9.08 = 99 RESTORE TO DEFAULT